




Recurve Collar Fitting Instructions

UNITS
CM



Step 1. Measure around your dogs neck where the collar will sit

Step 2. Use your measurement along with the chart and image below to determine how long each side of the collar should be.

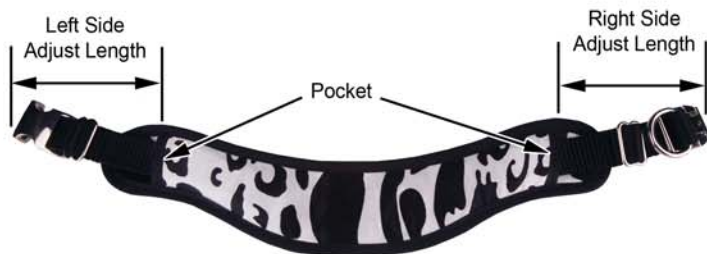

Small	34	35	36	37	38	38	40
Left Adjust	9	9.5	10	10.5	11	11.5	12
Right Adjust	8	8.5	9	9.5	10	10.5	11

Using the Sizing Chart:

- On the top line of the table locate the approxiamte length needed.
- Use the left Adjust and Right Adjust measurements to size the collar.
- These sizes are approximate. Some fine tuning of the fit may be needed.

Medium	39	40	41	42	43	44	45	46	47
Left Adjust	11.5	12	12.5	13	13.5	14	14.5	15	15.5
Right Adjust	8.5	9	9.5	10	10.5	11	11.5	12	12.5


Large	46	47	48	49	50	51	52	53	54	55	56
Left Adjust	13.5	14	14.5	15	15.5	16	16.5	17	17.5	18	18.5
Right Adjust	10	10.5	11	11.5	12	12.5	13	13.5	14	14.5	15



Step 3. On one side of the collar, pull the upper piece of webbing out of the pocket.



Step 4. Pull the webbing back through the adjustable slide.

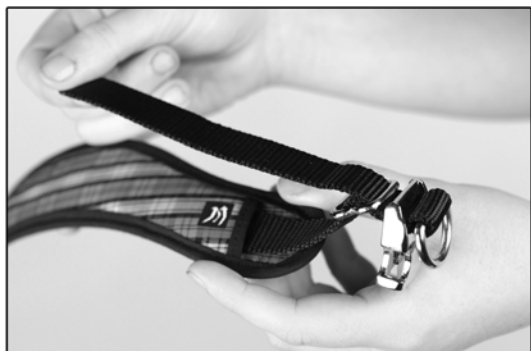

Step 5. Adjust the length of the strap until the measurement from the end of the pocket to the end of the clasp matches your measurement from the chart.



Step 6. Feed the webbing back through the adjustable slide. Check the other side of the collar for reference if needed.

Step 7. Repeat step 2-6 for the other side of the collar. Note: the left and right sides of the collar are different lengths.



Step 8. Test fit the collar. Note the direction of the curve.



Step 9. For proper fit ensure 1 finger fits easily under the collar for small collars, and 2 fingers for medium and large collars.



Step 10. Finish the adjustment by pushing the excess webbing back into the pocket. Squeezing in on the edges of the collar slightly will open the pocket a little and can make this step easier.

For support or assistance:
www.wickedhounds.com
wickedhounds@gmail.com